

## Locker Lock User Manual




Black  
(Passcode only)

White  
(Passcode, i-Key)


Gold  
(Passcode, RF Tag)

Power	DC 4.5V (AA Alkaline 1.5V batteries) x 3EA
Type	Electronic (Passcode, i-Key, RF Tag)
Weight	360g (including packing)
Dimension / Material	Outbody : 60(W) x 121(H) x 21(D) / PC-ABS Inbody : 66(W) x 130(H) x 27(D) / PC-ABS
Emergency Power	9V Alkaline battery (6LF22) 1EA (Optional Product)
Battery Life	Approximately 12 months (10 times per day on average) ※Battery life depends on battery quality, usage frequency or usage environment.

※Contents in user manual can be changed without notifying users in order to improve product quality or service.

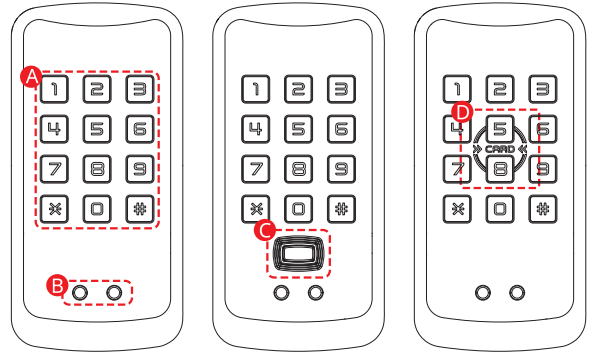

- A** Keypad (Backlighting)
- B** Emergency Power Port (9V)
- C** i-Key Reader
- D** RF Tag Reader

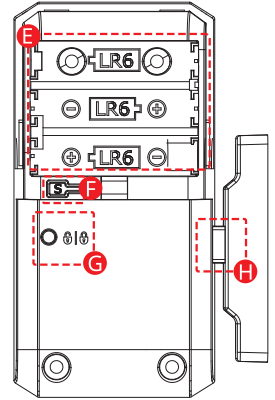

- E** Battery Box  
(AA Alkaline 1.5V batteries x 3EA)
- F** Register Button **S**
- G** Open/Close Button
- H** Deadbolt

When Inbody battery cover is opened

2

## Safety Information

■ This section contains user safety information. Please read carefully and use it properly.

**Caution** If not followed, user can be injured or property damage can be caused.

### Do not remove.

- ▶ You should not remove any installed parts from the door. If you need to do so for any reason, please contact service center and consult.
- ▶ It can cause product malfunction or operation malfunction.

### Do not spray water to the door lock or install it where it is exposed to water or damp.

- ▶ Locker lock is not water proof, thus water exposure can cause malfunctioning.

### Do not install where it is exposed to snow or rain. Due to the extreme temperature difference of indoor and outdoor, it can cause dampening the locker lock. Please use it after it dries.

- ▶ It can cause product malfunction or operation malfunction.


### Make sure the locker lock is properly installed and read manual for proper functioning.

- ▶ It can cause product malfunction or operation malfunction.

## Mode Setting

- MODE**
- One Time Mode : In case of a lot of people use one locker as a common use.
  - Personal Mode : In case of a person individually uses a specific locker.
    - Auto Mode : The door locks automatically when the door is closed.
    - Manual Mode : Close the door and press **⏏** button.

※Factory default is One Time Mode. If necessary, **Change the Mode.**

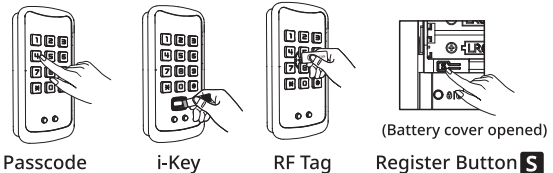

### One Time Mode Setting

- In case that Master Passcode has been registered
- In case that Mater Passcode has NOT been registered

**S** → Master Passcode → **##** → **4** → **S**

**S** → **4** → **S**

### Personal Mode Setting

- In case that Master Passcode has been registered
- In case that Mater Passcode has NOT been registered

**S** → Master Passcode → **##** → **6** → **S**

**S** → **6** → **S**

	Closing the door	Opening the door
One Time Mode	Close the door and input the desired passcode 4 digits.	Press the registered passcode. Or place the registered i-Key or RF Tag.
Personal Mode	(Auto) Close the door. It's closed automatically. (Manual) Close the door and Press <b>⏏</b> button.	

### Caution

- All settings, registration and deletion must be done with the door open.
- When mode change from personal mode to one time mode, existing information (PW, i-KEY, RF Card) is deleted.
- Be careful not to lose your PW, i-KEY and RF Card.
- Firstly register the user key and use it.

4

# User Key Setting

## How to register/change user PW/i-KEY/Card in one time mode

One time user key is registered when you close the door and enter the 4-digit password you want or place RF card.

## How to register/change user PW in personal mode

**S** → Password 4-digit → **✕**

### ※ Caution

- User password can not be used in one time mode.
- Overwrite existing password with new password.
- If you re-register password, existing password will be deleted.

## How to register user i-KEY/Card in personal mode

**S** → i-KEY or RF Card → **S**

### ※ Caution

- You can not use the user i-KEY/RF Card in one time mode.
- Registered i-KEY/RF Card will not be deleted when you register new i-KEY/RF Card.
- Already registered i-KEY/RF Card can not be registered again.

## How to delete user i-KEY/Card in personal mode

**S** → **☒** → **S**

### ※ Caution

- If you delete i-KEY/RF Card, all i-KEY/RF Card already registered will be deleted.

5

# Additional Functions

## Auto/Manual Locking Setting (Personal Mode Only)

Auto Locking

**S** → **7** → **S**

Manual Locking

**S** → **8** → **S**

### ※ Caution

- If you change the mode from one time mode to personal mode, the lock will work in Auto Locking mode.

## Intrusion Alarm Function

This function generates the alarm sound during 1 minute when an attempt is made to forcefully open the door. In order to turn off the alarm, press password, place i-KEY/Card or remove the battery.

## Prank Prevent Function


When incorrect user key(PW, i-KEY, Card) used for 5 consecutive times in personal auto locking mode, the system freezes for 30 seconds.

### ※ Caution

- Alarm goes off after 5 seconds and system freezes during 25 seconds.
- This alarm will keep warning even if remove the battery and re-install.

## Low Battery Melody Function

If it detects low battery, melody alarm will sound.

※ The product with LED type,  (Low Battery Icon) will be flickering. (Option)

## Volume Setting

Volume Control

**S** → **⊕** → **S**

Mute Mode

**S** → **□** → **S**

Loud Mode

**S** → **⊖** → **S**

### ※ Caution

- Volume goes up whenever press **⊕** button from 0 to 7 steps.

7

# Master Key Setting

## How to set Master Passcode

**S** → **1** → **⊕** → Password 4-digit → **✕**

## How to change Master Passcode

**S** → Master Passcode → **⊕** → **1** → **⊕** → Password 4-digit → **✕**

## How to delete Master Passcode

**S** → Master Passcode → **⊕** → **9** → **S**

## How to register Master i-KEY/RF Card

In case that Master Passcode has been registered.

**S** → Master Passcode → **⊕** → **1** → **⊕** → i-KEY or RF Card → **S**

In case that Mater Passcode has NOT been registered

**S** → **1** → **⊕** → i-KEY or RF Card → **S**

## How to delete Master i-KEY/RF Card

In case that Master Passcode has been registered.

**S** → Master Passcode → **⊕** → **2** → **S**

In case that Mater Passcode has NOT been registered

**S** → **2** → **S**

### ※ Caution

- If the product has i-KEY or Card function, you can use the i-KEY/Card as the master key.
- When you additional register master key, existing i-KEY/Card are not deleted. You can register up to 10. master key.

6

# Additional Functions

## Opening/Closing from Inside


When the children are trapped in a courier box, the door opens when the **6|0** button is pressed.



### ※ Caution

- One Time Mode : You can open the door from inside by pressing the button.
- Personal Mode : You can open/close the door from inside by pressing the button.

## How to set Locking Alert Function in One Time Mode

In case that the LED type product is in One Time Mode, the  icon flickers every 2 seconds when the door is locked to check the door lock status.(Option)

Turn On the Alert

**S** → **1** → **☒** → **S**

Turn Off the Alert

**S** → **1** → **7** → **S**

## User Key Control Function

This function is used when the manager wants to stop or cancel the using of the user locker for a specific reason.

Stop Using (Master Passcode)

**✕** → **1** → **⊕** → Master Passcode → **✕**

Press 3sec

Release (Master Password)

**✕** → **□** → **⊕** → Master Passcode → **✕**

Press 3sec

Stop Using (Master i-KEY/Master Card)

**✕** → **1** → **⊕** → Master i-KEY or Master RF Card

Press 3sec

Release (Master I-KEY/Master Card)

**✕** → **□** → **⊕** → Master i-KEY or Master RF Card

Press 3sec

### ※ Caution

- When an existing user key is used in stop mode : A 'beep-' alarm sounds. Please contact the manager to release.
- When an existing user key is used for 5 consecutive times in stop mode, 'Prank Prevent Function' will be started.
- In stop mode, you can open and close the door with master key (PW, i-KEY, Card). But existing user key(PW, i-KEY, Card) can access after release.

8