


LOCpro

Installation Manual

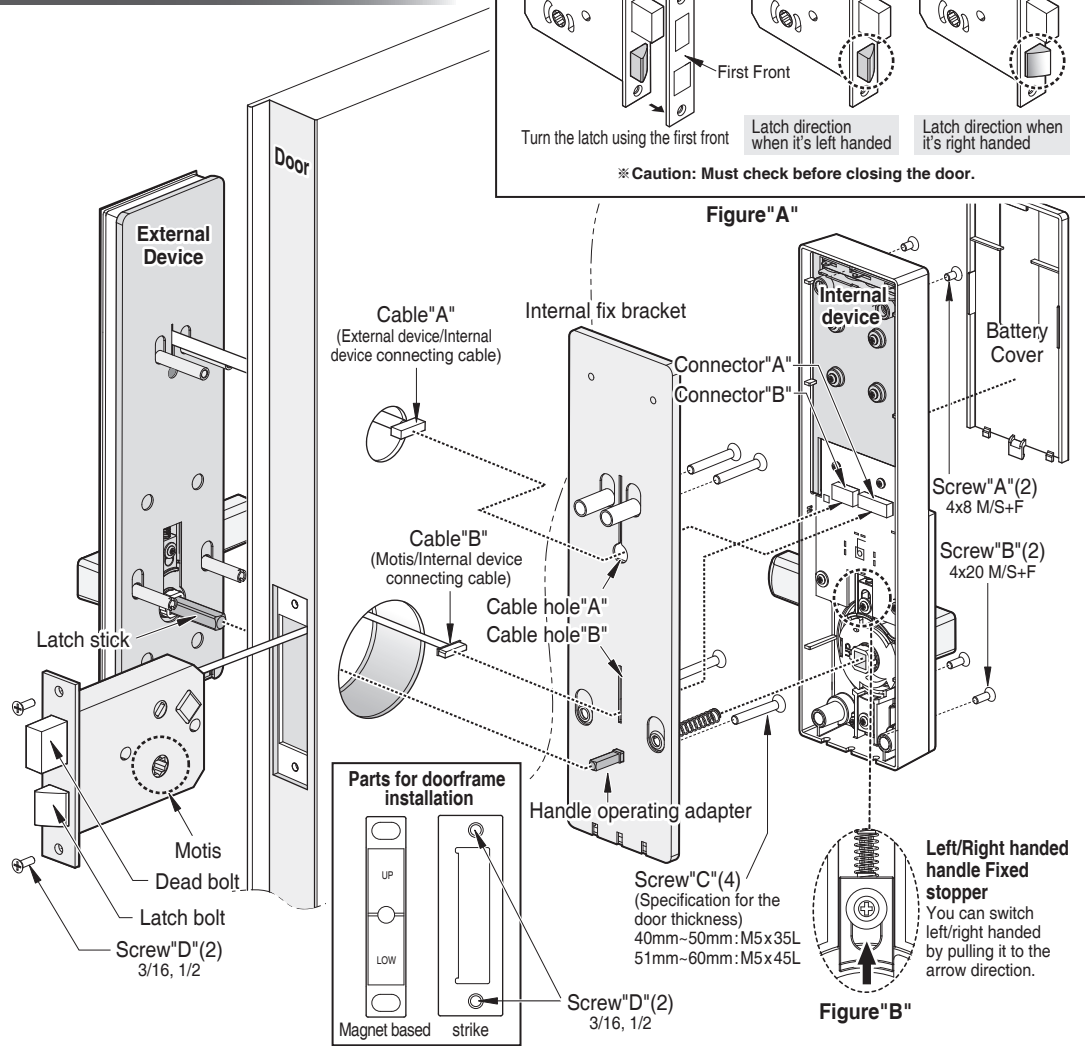

Installation Method

Drilling

1. Remove existing door lock, and place the installation manual after folding it 90° along the dotted folding line on to where the new door lock will be installed. You can purchase a separate plate to cover the remaining holes from the previous door lock.
2. With the manual on the door mark where it needs to be drilled. Do it inside/outside the door using the same method.
3. Puncture a hole with a hole cutter where marked. (For both inside and outside. Be careful when drilling from one side since it maybe off centered from going from one side to another)

Product Installation

1. In accordance with door direction, adjust latch bolt left/right with deadbolt facing upward. Refer to the Figure "A" for instruction on how to switch direction for latch bolt on Motis.
2. Install Motis with screw D as shown on the figure above. Make sure that Motis/Internal device connecting cable is cleared through inside the door first.
3. Fixate external device onto the door after setting left/right handle as shown on the figure "B"
4. Engage internal fix bracket and external device using 4 of screw C. External device/Internal device connecting cable and Motis/Internal connecting cable should each be cleared through internal fix bracket hole "A" and "B" prior to fixation.
5. Connect cable "A" and "B" to the internal device after left/right handle is set with internal device is in alignment as shown on the figure "B"
6. Engage internal device with internal fix bracket using screw "A" and "B". You need to remove the battery cover in order to engage screw "A". Close the battery cover after inserting 8 AA 1.5V batteries.
7. Install magnet base and strike respectably with screw "D" onto the doorframe.
8. Insert 1.5V AA alkaline batteries. Product installation is complete.

Installation Checklist

1. Refer to User's Manual to register or set different features and open/close the door more than three times to see if the product functions properly.
2. If working properly, place the Remote Security sticker on the product outside the door.
3. Explain cautions thoroughly to a customer and give the warranty form to the customer after carefully filling it out.

LOCpro

Installation Manual

⚠ Caution

Folding lone may not be aligned to the external door corner because of the doorframe.

Fold this line and align it to the door corner.

folding line

135

Drill Point

Ø68(Penetration)

Ø32(Penetration)

Drill Point

70

folding line

Fold this line and align it to the door corner.

⚠ Caution

Folding lone may not be aligned to the external door corner because of the doorframe.

Installation Manual based on door thickness of 40mm.

